

RUSH FOOT SHELLS

Passer til RUSH Hipro, Rampage, Rampage LP, Rogue2, Chopart og EVAQ8-modellene

Art.nr.	Modell	Lev.art.nr.
759092211	RUSH FOOTSHELL 22CM LEFT LIGHT	FS-22-L1
759092213	RUSH FOOTSHELL 22CM LEFT DARK	FS-22-L3
759092221	RUSH FOOTSHELL 22CM RIGHT LIGHT	FS-22-R1
759092223	RUSH FOOTSHELL 22CM RIGHT DARK	FS-22-R3
759092311	RUSH FOOTSHELL 23CM LEFT LIGHT	FS-23-L1
759092313	RUSH FOOTSHELL 23CM LEFT DARK	FS-23-L3
759092321	RUSH FOOTSHELL 23CM RIGHT LIGHT	FS-23-R1
759092323	RUSH FOOTSHELL 23CM RIGHT DARK	FS-23-R3
759092411	RUSH FOOTSHELL 24CM LEFT LIGHT	FS-24-L1
759092413	RUSH FOOTSHELL 24CM LEFT DARK	FS-24-L3
759092421	RUSH FOOTSHELL 24CM RIGHT LIGHT	FS-24-R1
759092423	RUSH FOOTSHELL 24CM RIGHT DARK	FS-24-R3
759092511	RUSH FOOTSHELL 25CM LEFT LIGHT	FS-25-L1
759092513	RUSH FOOTSHELL 25CM LEFT DARK	FS-25-L3
759092521	RUSH FOOTSHELL 25CM RIGHT LIGHT	FS-25-R1
759092523	RUSH FOOTSHELL 25CM RIGHT DARK	FS-25-R3
759092611	RUSH FOOTSHELL 26CM LEFT LIGHT	FS-26-L1
759092613	RUSH FOOTSHELL 26CM LEFT DARK	FS-26-L3
759092621	RUSH FOOTSHELL 26CM RIGHT LIGHT	FS-26-R1
759092623	RUSH FOOTSHELL 26CM RIGHT DARK	FS-26-R3
759092711	RUSH FOOTSHELL 27CM LEFT LIGHT	FS-27-L1
759092713	RUSH FOOTSHELL 27CM LEFT DARK	FS-27-L3
759092721	RUSH FOOTSHELL 27CM RIGHT LIGHT	FS-27-R1
759092723	RUSH FOOTSHELL 27CM RIGHT DARK	FS-27-R3
759092811	RUSH FOOTSHELL 28CM LEFT LIGHT	FS-28-L1
759092813	RUSH FOOTSHELL 28CM LEFT DARK	FS-28-L3
759092821	RUSH FOOTSHELL 28CM RIGHT LIGHT	FS-28-R1
759092823	RUSH FOOTSHELL 28CM RIGHT DARK	FS-28-R3
759092911	RUSH FOOTSHELL 29CM LEFT LIGHT	FS-29-L1
759092913	RUSH FOOTSHELL 29CM LEFT DARK	FS-29-L3
759092921	RUSH FOOTSHELL 29CM RIGHT LIGHT	FS-29-R1
759092923	RUSH FOOTSHELL 29CM RIGHT DARK	FS-29-R3