




Pick Your **RevoLock**® Fabrication Method


1. Pick a Kit

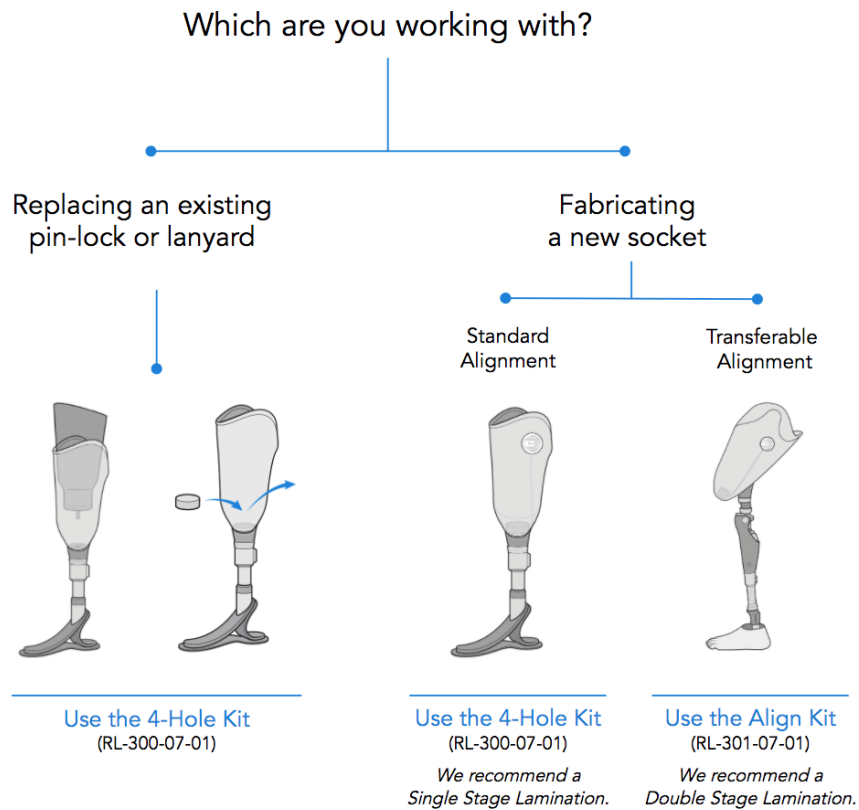

2. Pick a Reel Location

Once you have decided which kit you will be using, it's time to consider the Click® Reel placement.

Easy access =
mount reel proximally



Lowest profile =
mount reel distally



Insurance coding:

L5671 - LE and replacement
L6698 - Upper Extremity